

# ATILLA-200™ QUICK REFERENCE GUIDE



# ATILLA-200™ QUICK REFERENCE GUIDE

## CAUTION:

THERE ARE EYE AND OTHER HAZARDS ASSOCIATED WITH THE USE OF THE ATILLA. READ AND FOLLOW THE ATILLA OPERATOR MANUAL BEFORE USE. NEVER OPERATE THE ATILLA WITHOUT THE PROPER LASER SAFETY TRAINING. NIGHT VISION GOGGLES ARE REQUIRED TO VIEW THIS IR LASER. THE ATILLA CAN BE DETECTED BY ANY PERSON WITH A NIGHT VISION DEVICE.



## AA BATTERY INSTALLATION

Remove the battery cap. Place two AA lithium batteries into the battery compartment; positive (+) ends first. Replace the battery cap and securely tighten against o-ring.



## CONTINUOUS FIRE (CF) BUTTON

Turn the OFF/MODE switch knob to one of the firing modes. Press the continuous fire button to start and stop continuous laser/illuminator laser fire.



## FIRING THE LASER USING PADDLE OR REMOTE SWITCH

Ensure that the paddle or remote switch is installed. Turn the OFF/MODE switch knob to one of the firing modes. Press the button on the paddle or remote switch to momentarily fire the aimer/illuminator.

## POWER ADJUSTMENT BUTTONS

Activate continuous laser fire or press the momentary fire button on the installed remote or paddle switch. Increase power of the aimer/illuminator by pressing the arrows above the laser and light bulb icons. Decrease power by pressing the arrows below the laser and light bulb icons.



## OFF/MODE SWITCH KNOB

Mode Icon	Fire Mode Description
	ON- Steady
	ON- Slow Pulse, 1Hz
	ON- Fast Pulse, 2Hz
	ON-Steady with Illuminator
	ON- Slow Pulse with Illuminator