


# NIGHT HAWK™ 6X QUICK REFERENCE GUIDE

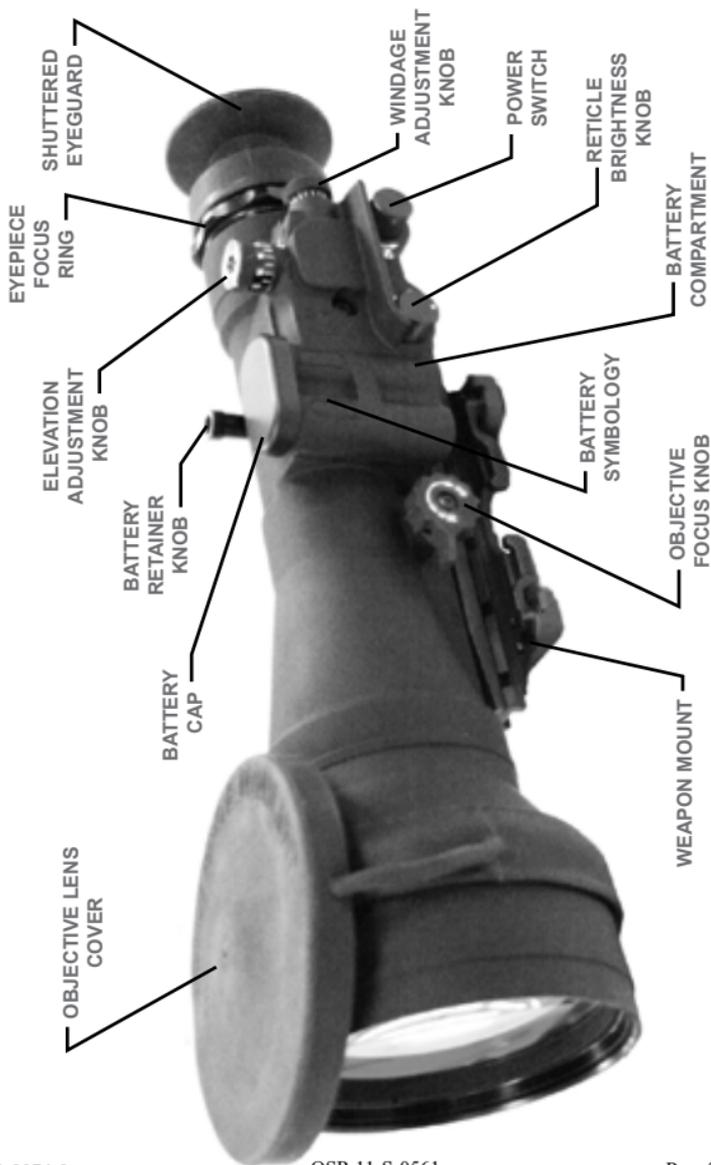

# NIGHT HAWK™ 6X QUICK REFERENCE GUIDE

**CAUTION:**  
**OPERATION IN HIGH LIGHT CONDITIONS CAN DAMAGE THE UNIT. INSTALL THE LENS CAP WITH BUILT-IN PINHOLE APERTURE FOR DAYLIGHT USE.**

## AA BATTERY INSTALLATION



Remove the battery cap by turning the battery retainer knob in a counter-clockwise direction. Insert the batteries into the battery compartment according to the battery symbology on the side of the compartment. Replace the battery cap by turning the battery retainer knob in a clockwise direction.

## ON/OFF POWER SWITCH



To activate the unit set it to the "ON" position by turning the power knob counter-clockwise until a "click" is sounded. Visually check that unit has power by viewing a scene through the eyepiece.

## EYEPIECE FOCUS RING ADJUSTMENT



The NIGHT HAWK has an adjustable eyepiece with a range of +2 to -5 diopters and a 30mm eye relief to accommodate various users. Rotate the eyepiece ring clockwise or counterclockwise to sharpen the reticle in the display.

## RANGE FOCUS KNOB



The optics of the NIGHTHAWK can be adjusted to view scenes at a range of distances. By turning the range focus knob clockwise or counter-clockwise the lens can be adjusted to focus distant objects from 98 ft (30 m) to infinity.

## RETICLE BRIGHTNESS



Turn the NIGHT HAWK to the "ON" position. Look through the eyepiece so that a scene is visible. Turn the reticle brightness knob in a counter-clockwise direction to increase the brightness.

## ELEVATION ADJUSTMENT SCREW



The knob base is labeled with a "DN" (for Down) and the knob clicks are numbered 1 through 19. Each click will move the reticle 0.2 mil up or down.

## WINDAGE ADJUSTMENT SCREW



The knob base is labeled "RT" (for Right) and the knob is marked with a zero reference tick to indicate deviation left or right from zero setting.