

VITAL™ Series QUICK REFERENCE GUIDE



VITAL™ Series QUICK REFERENCE GUIDE

CAUTION

THERE ARE EYE AND OTHER HAZARDS ASSOCIATED WITH THE USE OF THE VITAL. READ AND FOLLOW THE VITAL OPERATOR MANUAL BEFORE USE. NEVER OPERATE THE VITAL WITHOUT THE PROPER LASER SAFETY TRAINING. NIGHT VISION GOGGLES ARE REQUIRED TO VIEW THIS IR LASER. THE SAFETY SLIDE SHOULD BE KEPT IN THE SAFE POSITION AT ALL TIMES UNLESS FIRING THE LASER. THE VITAL CAN BE DETECTED BY ANY PERSON WITH A NIGHT VISION DEVICE.



AA BATTERY INSTALLATION

Release the battery catch and the battery retainer arm by rotating in a clockwise direction. Pull out the battery cap and place two AA batteries into the compartment per polarity symbols. Replace the battery cap, battery retainer arm and battery catch.



POWER ADJUSTMENT KNOB

The power adjustment knob is used to regulate output power of the aimer beam. Turn the knob counter-clockwise to reduce power. Turn the knob clockwise to increase power.



PADDLE OR REMOTE SWITCH INSTALLATION

Either the paddle or remote must be installed to fire the VITAL. Installation is achieved by firmly inserting them into the switch receptacle.



FIRING THE LASER

Ensure that the paddle or remote switch is installed. Turn the ON/OFF/MODE switch to one of the firing modes. To fire the VITAL press the momentary switch on paddle or remote switch. The VITAL fire button will only fire as long as it is depressed.

ON/OFF/MODES SWITCH

Mode Icon	Description
	ON - Steady
	ON - Slow Pulse, 3Hz
	ON - Fast Pulse, 6Hz
	ON - Steady with Low Power Close Quarter Battle (CQB) Illumination
	ON - Steady with High Power Close Quarter Battle (CQB) Illumination